




AB1/AB1 HTS INSTALLATION INSTRUCTIONS

Step 1 Identify parts

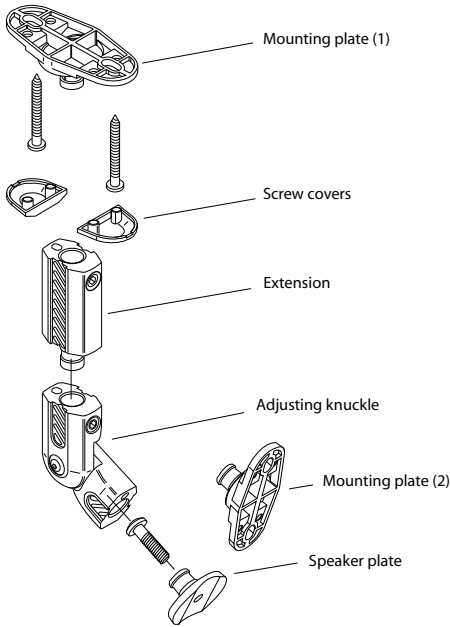

Provided fasteners and tools					
	AB1	HTS		AB1	HTS
	(1)	(5)	M4 X 10mm Phillips pan head machine screw		(2) (10)
	(1)	(5)	M5 X 12mm Phillips pan head machine screw		(1) (5)
	(2)	(10)	#8 X 3/4" Phillips pan head self-tapping screw		(1) (5)
	(2)	(10)	#8 X 1-3/4" Phillips pan head self-tapping screw		(1) (5)
	(1)	(5)	5/64" Hex key		(1) (2)
					(1) (5)

Additional installation tools


Phillips Head Screw Driver

Pencil


Electric Drill

Drill Bits: 1/8" drill bit for drywall

3/16" masonry bit for cement wall applications

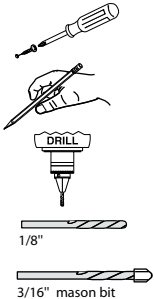





Step 2 Decide on location

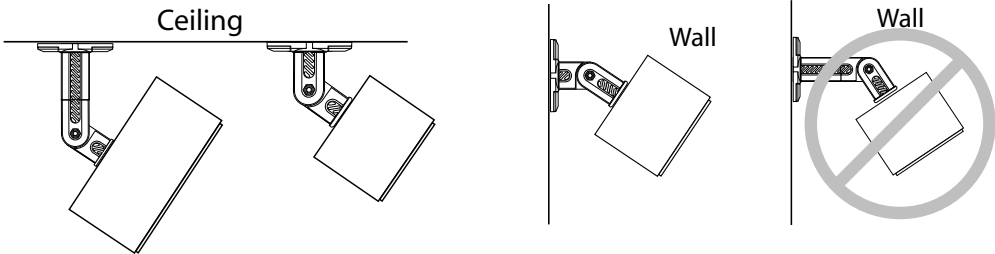

Step 3 Installation of wall plate





Mounting to drywall.

1. Use wall plate as a template and mark screw hole locations.
2. Drill into drywall with 1/4" drill bit. Insert the anchors into hole, see fig. 3.
3. Secure with #8 x 1-3/4" screws, see fig. 4.

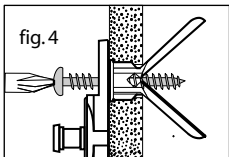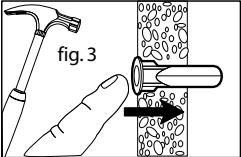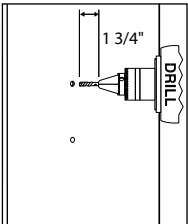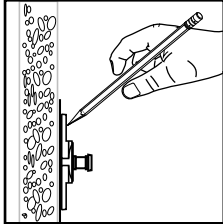

Mounting to solid concrete or cinder block.

1. Drill into surface with 3/16" masonry drill bit to 1-3/4" deep. Insert anchors into the holes, see fig. 3.
2. Secure wall plate with #8 x 1-3/4" screws, see fig. 4.



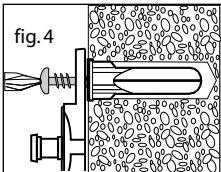
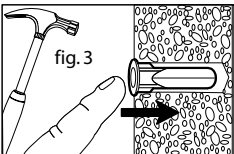
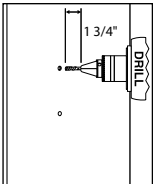
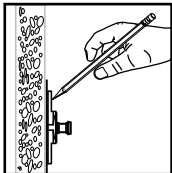


Step 3 Installation of wall plate (continued)

Mounting to solid wood or wood studs.

Drill a pilot hole into center of each location using 3/32" drill bit (provided). Drill 1-1/4" into the stud.




Attach wall plate with two #8 x 1-3/4" wood screws.

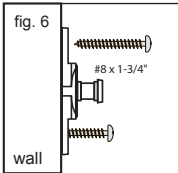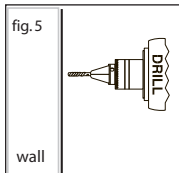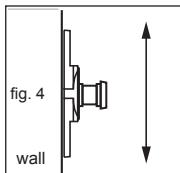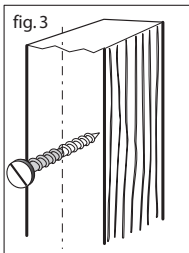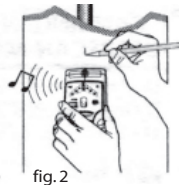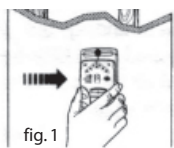



Step 4

Installation of radius plate, button stud plate or mounting plate onto speaker.





1. Speakers with one threaded insert (fig. 1) or Bose® series (fig. 2).

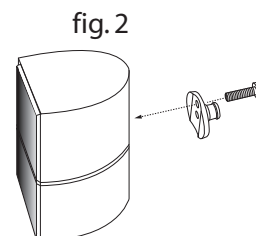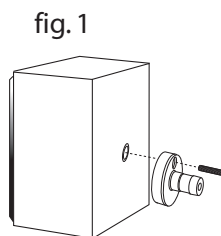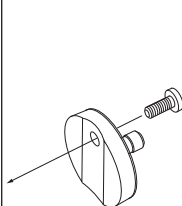



2. Speakers with single keyhole in back. Insert assembly (fig. 3) into keyhole and slide upward - then tighten (fig. 4).

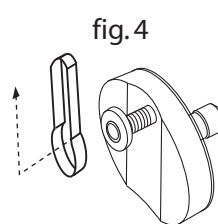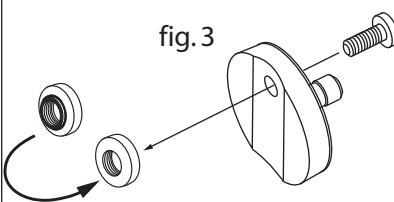




3. Speakers without mounting holes - wood cabinet only.

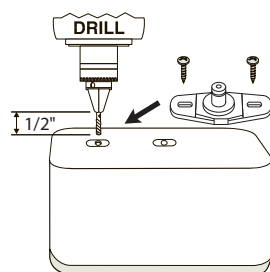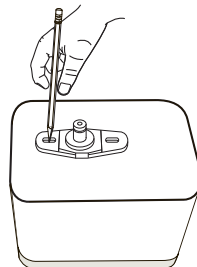

4. Speakers with 1/4"-20 insert on back.

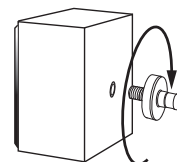

Step 5 Installation of adjusting knuckle and extension.

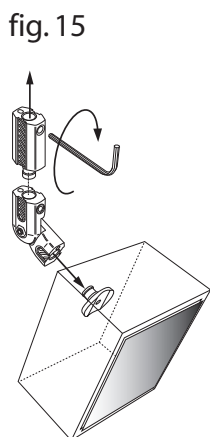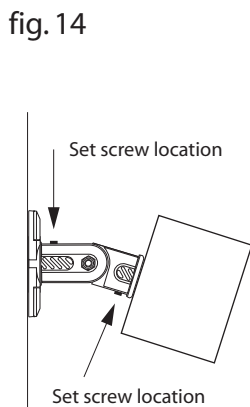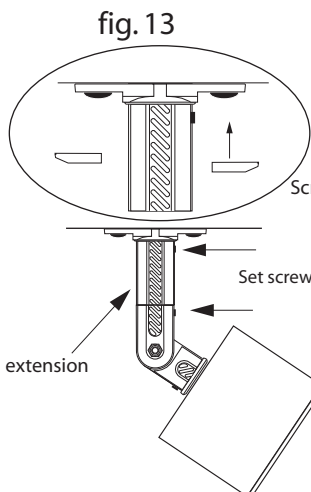

OmniMount Systems, Inc.
The Pointe at South Mountain
8201 South 48th Street
Phoenix, Arizona 85044-5355
Toll free 1-800-MOUNT-IT
(480) 829-8000
Fax: (480) 756-9000
email: info@omnimount.com

100% Replacement Warranty

Audio Basics products are engineered and manufactured to the highest standards. In the event that there are defects in materials, workmanship, or missing parts, OmniMount Systems will, at its discretion, repair or replace your Audio Basics product. Claims that are submitted must include either the sales slip or proof of purchase. If OmniMount products are used for purposes other than their original intent, OmniMount Systems, its distributors and retailers shall not be held responsible or liable for injuries or property damage, direct, indirect or consequential, which may arise from the inability to use this product safely, properly, and in the manner for which it has been designed and manufactured. This warranty does not apply to products which have been lost, damaged by misuse, abuse or accident, altered or repaired in any way other than specified by OmniMount Systems, Inc. This warranty is non-transferable. For installation assistance please call our toll free help line at 1-800-MOUNT-IT

Copyright 2004 OmniMount Systems, Inc. All rights reserved. OmniMount products are covered by patents issued and/or pending. "OmniMount" is a registered trademark of OmniMount Systems, Inc. "Audio Basics" is a trademark of OmniMount Systems, Inc. AB-2 revision 2, 1/04 Part #1000254. Printed in the U.S.A.